


TITLE		
KIT BUMP-138174 (138-174 MHz)		
DRAWING Nr.		
C-44350 1/3		
Drawn by G.M	Approved by A.T	Date JUL-18-2022




ANTENNA INSTALLATION & CABLE ROUTING

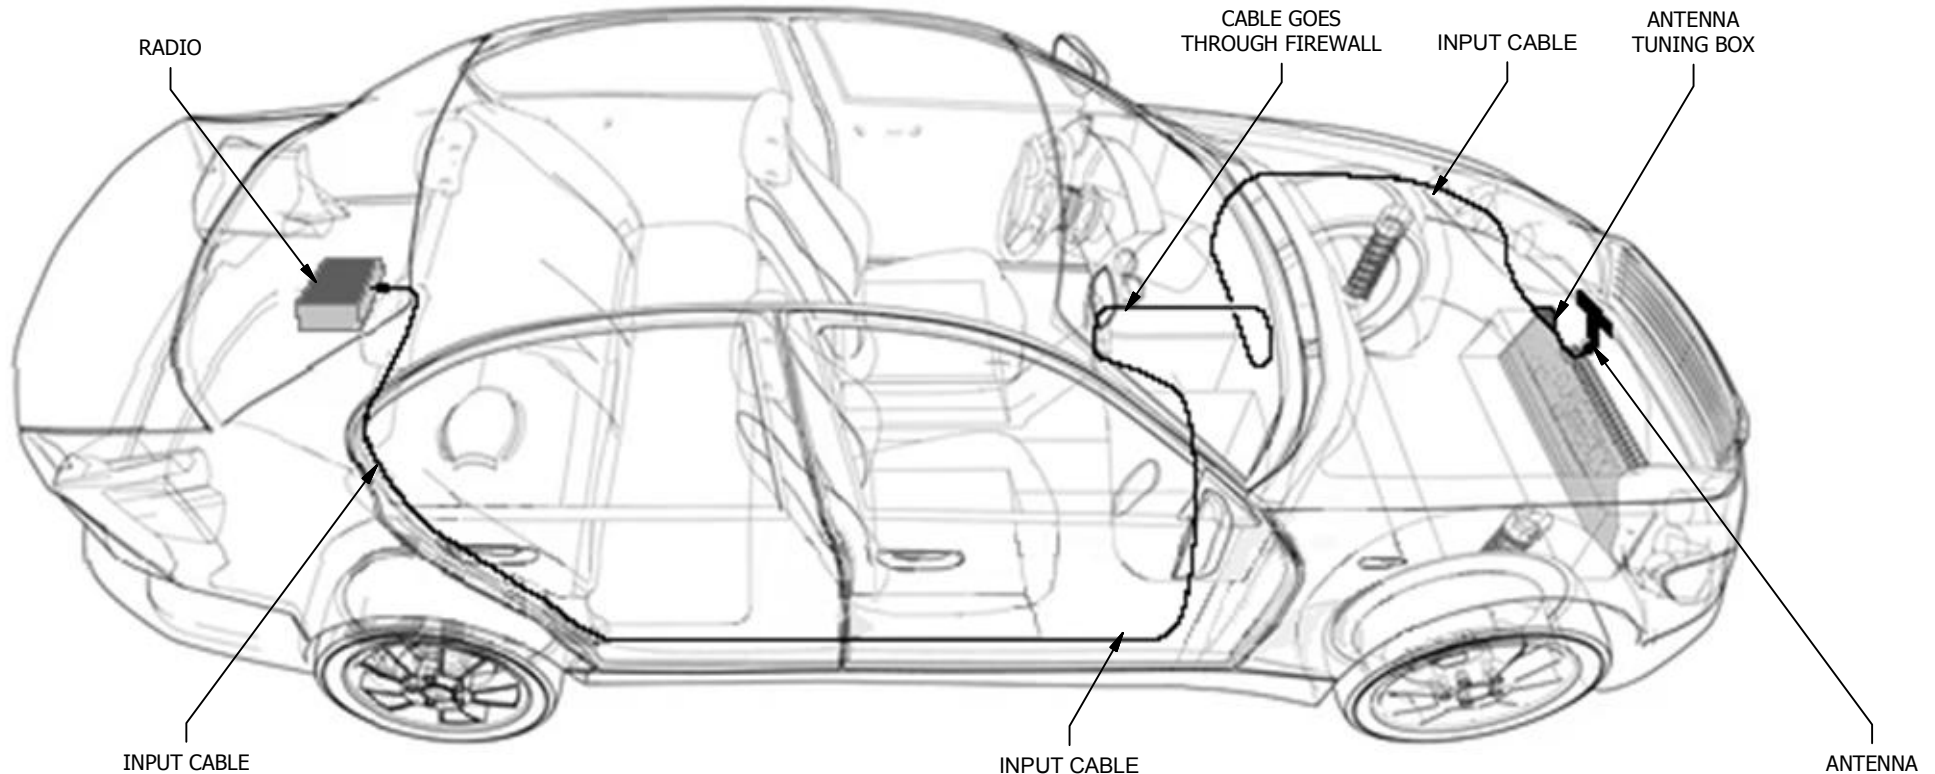

STEPS:


- 1 - When location has been well determined, fasten the antenna tuning box with 3 self-tapping screws, to the vehicle frame.
- 2 - Clean internal bumper surface with degreaser solvent before fixing (sticking as vertically as possible) the antenna.
- 3 - Route the input cable through the engine compartment (secured with tie-wraps), through firewall and into the vehicle to the radio, keeping them away from any moving parts.
- 4 - After routing cables, attach loose connectors, supplied with the antennas.

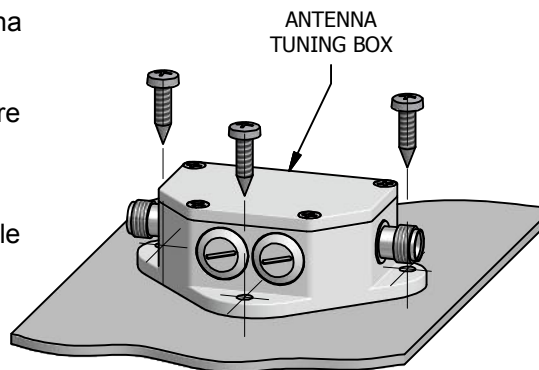








NOTE:

- Do not connect the cable to the radio until the tuning procedure is complete!

TITLE	MOUNTING INSTRUCTIONS OF KIT BUMP-138174 (138-174 MHz)		
DRAWING NO.	C-44350 2/3		
Drawn by G.M	Approved by A.T	Date JUL-18-2022	



ANTENNA TUNING - DETAIL A

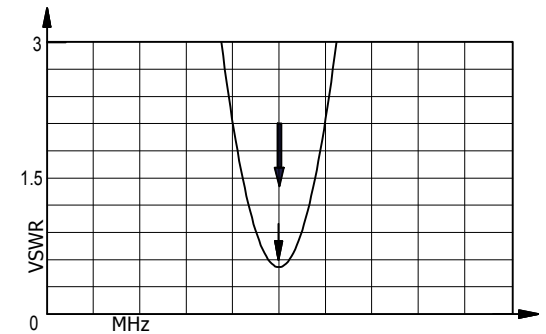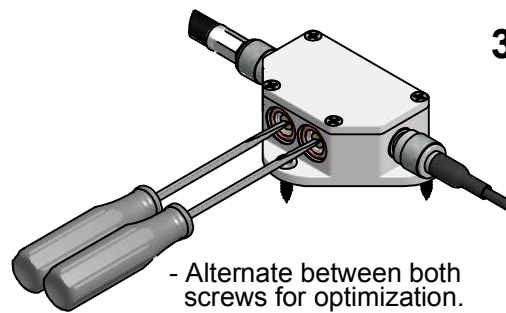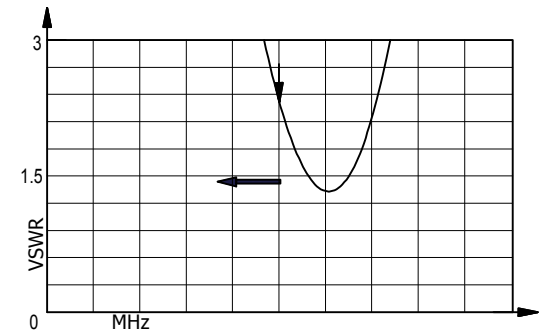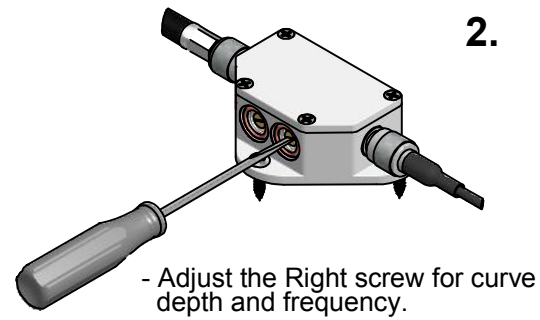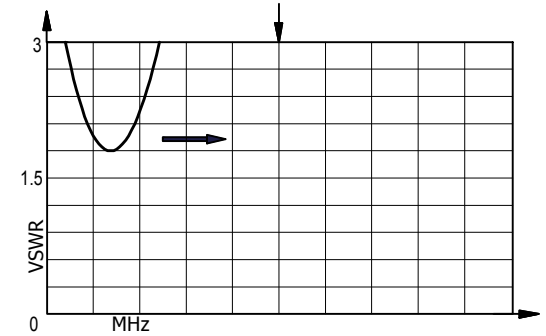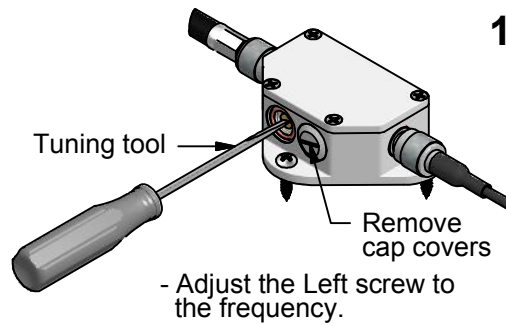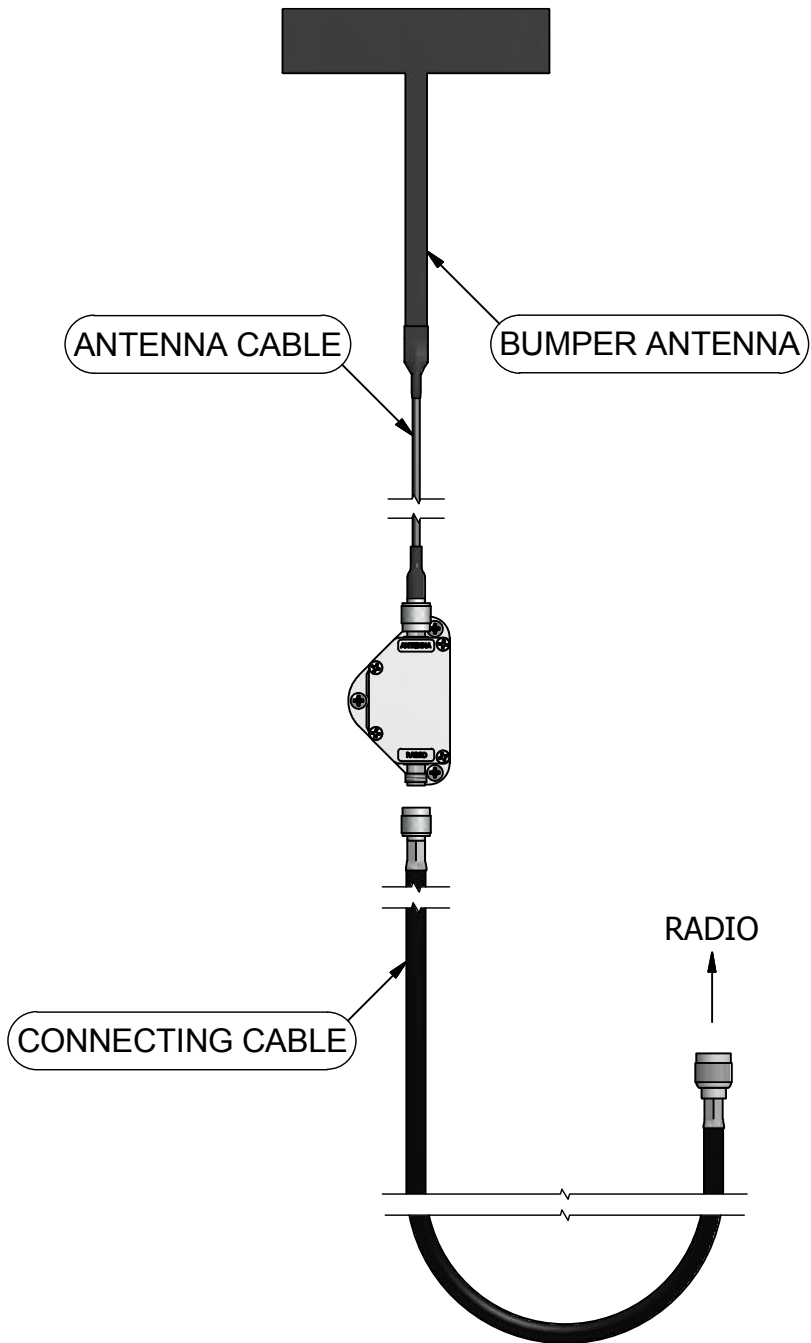

TITLE MOUNTING INSTRUCTIONS
OF KIT BUMP-138174
(138-174 MHz)

DRAWING NO. **C-44350**
3/3

Drawn by
G.M

Approved by
A.T

Date
JUL-18-2022

